

ELECTRIC BICYCLE OWNER'S MANUAL SUPPLEMENT

For Owners of EG Oahu and EG Maui Electric Bicycle

Table of Contents


<i>Descriptions:</i>	<i>Page</i>
Installation Instructions_____	2
How to install the bicycle out of the box_____	2
Operation Instructions_____	3
How to operate the Electric Bicycle_____	3
About the Brake Safety Feature on all our Electric Bikes_____	5
How to read the Battery Meters and about the Li-on Battery_____	5
Care Instructions_____	5
Battery_____	5
Storage, Maintenance and Transport_____	6
Battery_____	6
Charger_____	6
Charger_____	7
Accessories_____	7
Electric Motor and Battery Features_____	7
Charging the Battery_____	7
Repair and Service_____	8
Inspection of the Bearings and Maintenance_____	8
Serial Numbers to your EG Electric Bike _____	8
How to detach the rear wheel of the Electric bike _____	8

This portion of owners manual is a supplement to the Bicycle owner's manual. This section pertains to the features in the electric bicycle and how to care for them.

INSTALLATION INSTRUCTIONS



Mountain Bicycles & Crossbikes . Mountain bicycles are designed to give maximum comfort over a wider variety of road surfaces. The wider handlebars and convenient shift lever position make them very easy to control. Wider wheel rims and tyres give them a softer ride with more traction on rough surfaces. The frame and fork on mountain style bicycles is much sturdier and heavier than a racing style bicycle. A variation of the mountain bicycle is the crossbike or hybrid. This style of bicycle is lighter than a mountain bicycle but not as fast as a racing bicycle. It combines some of the features of comfort and control with lighter weight and higher speed.

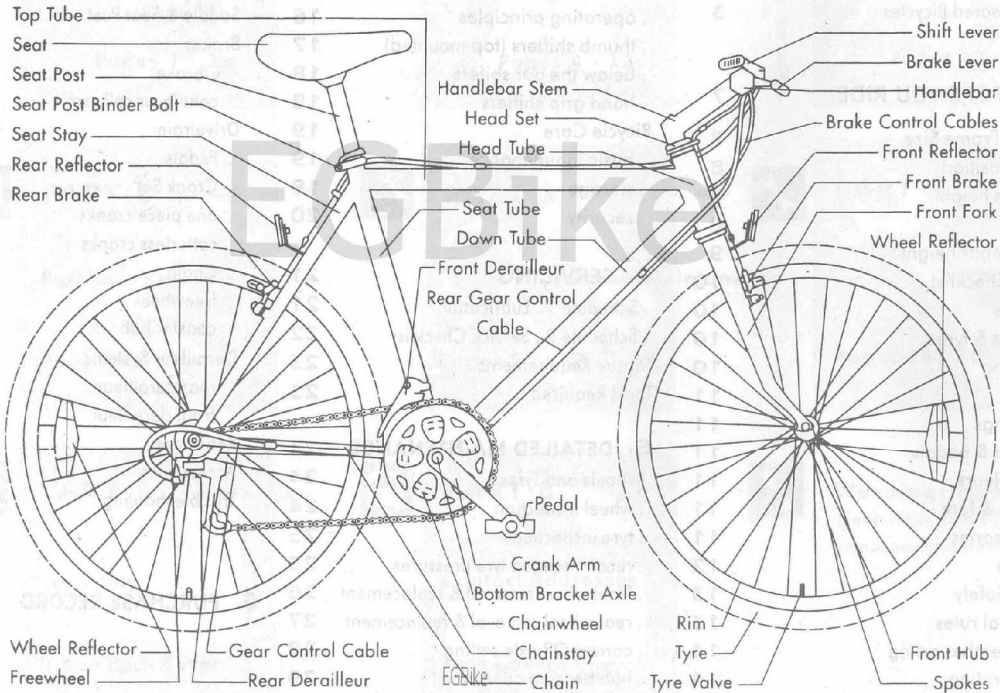

How to install the bicycle out of the box

1. Unpack the bicycle from the box and cut all the ties that held the bicycle together during shipping.
2. Insert the head set cover/cable guide piece onto the handlebar stem, and handlebar stem onto the Head tube. Align the handlebar such that it is 90 degrees to the front wheel and then tighten the screw with the supplied Allen key.
3. Remove the battery from the rack, so that it is easier to turn the bicycle upside down to install the front wheel. To remove the battery, use the large keys insert them into the bottom key hole and turn the key clockwise to release the latch holding the battery. While the key is turned, gently slide the battery from the holder.
4. ! WARNING: Please make sure that the saddle and the handle bar are installed properly before turning the bicycle upside down to install the front wheel. Ensure the weight of the bike does not bend the rear mudguard.
5. Turn the bicycle upside down such that the fork is facing upward.
6. Check the pattern of the tire such that when installed they will match the direction of the rear tires.
7. Install the Quick Release lever onto the front wheel with the lever on the same side as the Disc Brake.

8. Install the front wheel by placing the wheel between the forks. Please make sure that the disk rotor slides in between the disk brake caliper. Loosen the brake caliper cable using the supplied Allen key as necessary. Lock in the axle by tightening the nut opposite to the quick release lever and then locking in the quick release lever.
9. ! WARNING: Do NOT over tighten the quick release nut against the fork; for you will risk bending the quick release.
10. Turn the bicycle back around on its wheels, and lower the kick-stand.
11. Install the pedals to the bike. Each of the pedals has a letter indicating which side it needs to be installed to. R=Right and L=Left. Install them using the provided wrench.
12. Install the white front LED Lamp behind the front Suspension fork arc of your bike. Install the front mudguard hanger onto the same screw.
13. Install the mudguard stays against the bracket provided on the suspension fork. Place the stays between the clip brackets and tighten the screw against the suspension fork.
14. Place the small black plastic cover over the stem screw of the bike.
15. ! WARNING: Before riding the bicycle ensure the main Li-ion battery is properly installed and locked in. If the Battery is not firmly locked onto the rear rack, it may slide off the rack and cause damage to the battery.
16. Insert the battery into the rear rack until a click can be heard. Ensure that the rails are properly aligned below the battery. Ensure that the battery is locked in by lightly tugging on the battery to ensure it will not slide out.
17. The bike is equipped with 2 separate sets of keys. The bottom key is used to release the battery and the top smaller key is to turn the electrical system of bike on or off. To turn "ON" the bike's electric system, turn the top key clockwise and then press the red "ON/OFF" button on the meter located on the left side of the handlebar.

OPERATION INSTRUCTIONS

How to operate the Electric Bicycle

The Electric bicycle can be operated in 3 different modes:

1. *Manual Mode* –
 - Make sure the Battery Meter/power meter on the left of the handlebar is "OFF" and then, peddle the bicycle normally as you would any bicycle.
 - In this mode it is not necessary to insert small ignition the key or turn on the electric system of the bike.
- 2a. *Peddle Assist Mode (LOW)* –
 - Place the smaller top key in the switch and turn the key clockwise to turn on the electrical system.
 - Press the red "ON/OFF" button on the meter located to the left of the handlebar to turn "ON" the system. Peddle the bicycle normally as you would any bicycle.
 - The motor will stop if the brake lever is depressed even if you are still peddling the bicycle.
 - The motor will stop when you stop peddling in this mode.
 - When first switched "ON" the motor starts off in the "LOW" power mode.
 - In this mode the motor is very power efficient, and will assist you with the least power as you peddle.
 - In "LOW" mode, the system provides you with the most "miles per charge" of battery power use among the peddle assist modes.

2b. Peddle Assist Mode (Medium) –

- To put the bike in “Medium” peddle assist mode, switch on the bike as you would on the above “LOW” mode and then press the green “Mode” button to light up the “MED” mode and peddle the bicycle normally as you would any bicycle.
- In this mode, the motor will assist you with a moderate amount of power as you peddle the bicycle.
- The motor will stop if the brake lever is depressed even if you are still peddling the bicycle.
- The motor will stop when you stop peddling in this mode.
- This mode will give you a balanced “miles per charge” of battery power use among the peddle assist modes.

2c. Peddle Assist Mode (High) –

- To put the bike in “High” peddle assist mode, switch on the bike as you would on the above “LOW” mode and then press the green “Mode” button to light up the “HIGH” mode and peddle the bicycle normally as you would any bicycle.
- In this mode, the motor will assist you with a high amount of power as you peddle the bicycle.
- ! CAUTION: This mode is designed to achieve a speed of 20 MPH. User discretion is advised
- The motor will stop if the brake lever is depressed even if you are still peddling the bicycle.
- The motor will stop when you stop peddling in this mode.
- This mode will give you a low “miles per charge” of battery power use among the peddle assist modes.

3. Peddle Assist Mode (Off) –

- To put the bike in “Off” peddle assist mode, switch on the bike as you would on the above “LOW” mode and then press the green “Mode” button until all the mode lights turns off.
- In this mode, the motor will NOT assist while you are peddling the bicycle. However, the throttle is still active and can be used to provide you the power on demand.

4. Fully Electric Mode –

- Place the smaller top key in the switch and turn the key clockwise to turn on the electrical system.
- Press the red “ON/OFF” button on the handlebar meter to turn “ON” the system.
- Place the “MODE” switch to the left of the handle bar in any position you desire, because while engaging the thumb throttle, the peddle assist mode is in-active and does not have any effect on the speed or power of the electric motor.
- Twist the thumb throttle in any increments of power you desire to power the motor of the bicycle and it will take off.
- This mode can be used in conjunction with any of the above modes as the amount of motor power supplied while twisting the thumb throttle overrides whatever mode the “MODE” switch on the handle bar is engaged in.
- You can engage this mode whenever you want as long as the system is turned “ON”.
- While peddling will lighten the load demand on the electric motor, you do NOT need to peddle in this mode of operation.
- ! CAUTION: This mode is designed to achieve a speed of 20 MPH. User discretion is advised
- The motor will NOT stop when you stop peddling while the thumb throttle is engaged.
- The motor will stop if the brake lever is depressed even if the thumb throttle is engaged.

- ! CAUTION: Remember to let go of the thumb throttle when getting on or off the bike whether or not the brake levers are engaged.
- In this mode, the electric bike will use the most amount of battery power it will use even more battery power than in any of the peddle assist modes.
- This mode will give you the least “miles per charge” compared to any of the above modes of operation

About the Brake Safety Feature on all our Electric Bikes.

- ALL our electric bikes make use of a wired brake lever kill switch for safety purposes. When the brake lever is engaged, it sends a kill signal to the controller to disable the motor under all circumstances and condition. This will ensure the motor does not continue to spin when you need the bicycle to stop.

How to read the Battery Meters and about the Li-on battery

There are 2 Battery meters on your bike. 1 is located conveniently on the left hand side of the handle bar. The 4 red LED lights below the incremental bars indicate the state of the battery discharge. The other Battery meter is located on to the top rear of battery with 5 green LEDs showing the current capacity of the battery in various states of discharge.

As with any Lithium-ion batteries, there are a limited number of times a battery can be charged. While priming Lithium-ion batteries are not necessary (which means it may be charged whenever you want without affecting its charge capacity), the number of times it is charged does affect the overall longevity of the battery life.

To conserve battery power, the switch/meter on the handlebar will automatically switch itself off after approximately 5 minutes of idling. You can also switch off the electrical system by turning the key to the “off” position, when the electric power is not needed.

! NOTE: The sole purpose of the larger set of keys for the bottom lock is used only to unlatch the battery pack for removal. You do not need to insert this key to operate the electrical system of the bicycle, nor do you need this key to insert the battery to lock it on to the bike.

! NOTE: The sole purpose of the smaller pair of keys is to turn the electrical system “ON/OFF”. You will need this key to operate the electric motor of your electric bike and this key does not unlock the battery latch. This key is used on the top ignition lock of your Electric Bike.

! WARNING: Please keep the 2 set of keys to your electric bicycle in a safe place. Each set of keys are unique to your particular electric bicycle and unfortunately we do not keep a copy of your keys on file. Nor would we have a way of reproducing them.

CARE INSTRUCTIONS

Battery

! WARNING:

- Never short circuit the charge or discharge battery terminals.
- Never charge the battery by the discharge terminals or discharge the battery by the charge terminals.

- Keep the battery away from excessive heat and or open flames.
- Never pour on or submerge the battery in water.
- To avoid damage to the battery, never subject the battery to intense physical impact, shock or severe vibration.
- Protect the battery from water or moisture at all times.
- Protect the discharge and charge terminals of the battery from rain or water logging.
- Keep the battery away from children.
- When the battery is not in use for an extended period of time, remove the battery from the battery holder for storage.
- Never disassemble the battery. The battery does not contain serviceable parts.
- Do not sit on or place any object on or over the battery.
- Use only the supplied charger to charge the battery.

Battery capacity: 10Ah

Battery and Motor Voltage: 36V

Charge temperature range 0~45°C

Discharge temperature range -20~55°C

Total Charge time from total discharge: 4-6 hours

Total Charge time for the initial first 3 charges: 12 hours

If you have any questions about this battery or its usage, please do not hesitate to contact us

Storage, Maintenance and transport

Battery

- If the battery needs to be stored for an extended period of time, it should be kept at around 50% charge capacity (or charge the battery for about 2-3hours from empty) and should be placed in a dry and well ventilated place.
- To maintain battery life expectancy, the battery needs to be charged at least once for 2-3 hours every two months.
- The battery and charger should be kept in storage in a clean, dry and well ventilated place. Avoid contact with corrosive substances and keep the battery away from excessive heat and or open flames.
- Should the battery need to be transported, pack it in a box, and ensure that it is always protected from intense physical impact, shock, severe vibrations, direct sunlight, or water logging. The battery may be transported in a vehicle such as an automobile, train, ship, airplane and etc. Please check your local rules and regulations regarding such transportation.

Battery Storage conditions: Room temperature -20~35°C,

Battery Storage relative humidity: 5~65%RH

Charger

- The charger should be disconnected from the battery when it is kept in storage.
- Should the charger need to be transported, pack it into a box and ensure that it is always protected from intense physical shock, severe vibrations, impact, direct sunlight, or water logging. The battery may be transported in a vehicle such as an automobile, train, ship, airplane and etc. Please check your local rules and regulations regarding such transportation.

Charger Storage conditions: Room temperature -20 ~ 35°C,

Charger relative humidity: 5~65%RH

Charger

! WARNING:

- Never place any object on the charger.
- Never pour any liquid on or insert any metal into the charger.
- Never disassemble or modify the charger in anyway.
- Never plug or un-plug the charger with a wet hand
- Do not use the charger during a lightning storm.
- Use only the supplied charger to re-charge the battery.
- Do not operate the charger in an unstable, dusty or an excessively damp environment.
- Avoid using the charger under direct sunlight.
- Operate the charger in a well ventilation environment.
- Unplug the charger from the wall outlet when not in use.

Accessories

! WARNING :

- Ensure you do NOT raise the seat post pass the safety mark etched on the seat posts.
- Ensure that your assembled accessory does not interfere with the steering, braking or the natural movement of the bicycle.

Electric Motor and Battery Features

High efficiency and power saving Electric Motor–

- A Brushless Motor with gears
- High efficiency of up to 85%. 7N.m~22.75N.m torque
- Efficiency>80%. 36V battery for a continuous run range of more than 40 miles on a single charge in pedal assist mode for the EG Maui and 25+ miles on a single charge for the EG Oahu.
- Produces a continuous and sustained power of 350 Watt power with a peak of up to 700 Watts on the EG Maui and sustained power of 500 Watt with a peak of up to 800 Watts.

High power and high torque –

- Fast pick up even under heavy load. Easily climb and ascend sloppy terrains.
- Low power consumption, Long-battery life and a Compact design.
- The 36 Volt Battery pack weighs 11.1 Lbs.

Trouble-free, Low maintenance, Long life span and Easy to maintain electric motor –

- High Quality Brushless Electric Disc motor with an advance speed sensor and gears.
- Closed system motor requires only surface cleaning and dry storage.

Charging the Battery

- Connect the battery to the charger; ensure the output terminal of the charger and the input terminal of the battery are firmly connected.
- When the charger is plugged into a wall outlet, the charger LED indicator will turn RED to indicate that the battery is charging
- The LED indicator on the charger will turn GREEN when the battery is fully charged.
- Disconnect the charger from the wall outlet before disconnecting the charger from the battery.
- To ensure long battery life, fully charge the battery for at least twelve (12) hours during the first initial three charges and charge the battery at least once for 2-3 hours every 2 months
- ! NOTE: Only charge the battery pack using the supplied charger.

- ! NOTE: Always plug the charger onto the Battery pack before plugging the charger to the wall socket.
- ! WARNING: Do NOT charge the battery for more than 24hrs for risk of damaging the battery.

Repair and Service

! WARNING:

- Inspect the bicycle frequently. Failure to inspect the bicycle and to make repairs or adjustments, as necessary, can result in injury to the rider or to others. Make sure all parts are correctly assembled and adjusted as written in the owner's manual.
- Immediately replace any damaged, missing, or worn parts.
- Make sure all fasteners are correctly tightened as written in the owner's manual
- Parts that are not properly tightened can be lost or operate poorly.
- Do not over tighten parts, as over-tightening may damage the part.
- Make sure any replacement fasteners are of the correct type and size.
- Your bike uses an Aluminum Alloy frame. Ensure that the bicycle frame is carefully and frequently inspected; as Aluminum frames can develop micro fractures from stress, severe impact and shocks. If you see these micro fractures or cracks, stop riding the bicycle immediately.
- In case of micro fractures, have the bicycle frame repaired and inspected by a qualified professional before riding the bicycle again.

NOTE: Have a bicycle service shop make any repairs or adjustments for which you do not have the correct tools to or if you do not sufficiently understand the instructions set forth in this electric bicycle's manual supplement or the bicycle owner's manual.

Inspection of the Bearings Maintenance

1. Frequently check the bearings of the bicycle. Have a bicycle service shop lubricate the bearing once a year or any time they do not pass the tests as noted in the Bicycle owner's manual.

Serial Numbers to your EG Electric Bike

1. The Serial number to your EG Electric Bike is located right where the front Suspension fork meets the frame of the bike. It is at the front of the frame near your front LED lamp.

How to detach the rear wheel of the Electric bike

1. ! WARNING: We do not condone modifying the EG Electric Bicycle in any way shape or form. Modifying the bike in any way, will void your Warranty. The instructions below are written only for the maintenance or repair of the bike.
2. To detach the rear wheel, first unhook the connector near the rear wheel on the right hand side of the bike.
3. Remove the plastic covers over the screws on the rear axle.
4. Unscrew the nuts on both sides of the rear axle and the wheel should come right off.
5. Unhook the chains from the rear freewheel (gears)
6. To install it back on, please note and reverse all the detachment instructions.